

USER MANUAL

SABA-MB100



SABA HOOKAH – MB100 - Music Base

Bluetooth Hookah System with Locking Mechanism & LED Lights

Product Features

1. Elegant and modern design, perfect for home and lounge use.
2. High-performance Bluetooth 5.4 module for smooth, stable connection.
3. TF card support and USB/OTG input for direct music playback.
4. Digital power amplifier with full-frequency speakers for premium sound.
5. Large capacity rechargeable lithium battery (8000mAh, 7.4V).
6. SABA Music Base sound quality with powerful bass resonance.
7. Color-changing LED light modes for an enhanced hookah experience.
8. Secure locking mechanism for stable and airtight setup.

Technical Specifications

- Model: MB100
- Bluetooth Version: 5.4
- Wireless Range: Up to 10 meters (barrier free)
- Signal-to-Noise Ratio: $\geq 85\text{dBA}$
- Speaker Size: 58mm $\times$ 4
- Rated Power: 120W
- Battery Capacity: 8000mAh (Lithium 18650)
- Charging Voltage: DC 5V / 2A
- Charging Time: ~5 hours

Control Keys

- Power (⏻): Long press 3s to turn ON/OFF. Long press 10s to reset. Short press to pause/play.
- Mode (M): Short press to switch modes.
- Minus (-): Long press for previous track. Short press to decrease Volume.
- Plus (+): Long press for next track. Short press to increase volume.
- Light (💡): Long press to turn lights ON/OFF. Short press to switch light modes.

Function Ports

- AUX: External audio input
- TF Card Slot: Insert TF card to play music
- USB/OTG Port: Insert USB drive or connect via OTG cable to phone/computer
- Type-C Charging Port (5V/2A)

Charging Instructions

1. When the battery level is too low, the product will automatically shut down.
2. Use the included USB-C charging cable with a standard phone charger.
3. Red indicator = charging, Light OFF = fully charged.
4. Charging time: about 5 hours.
5. Use only certified 5V/2A adapters.

Safety Notes

1. If the unit emits smoke, smell, or abnormal performance, stop using immediately and contact dealer.
2. Do not expose interior to rain or moisture.
3. Avoid high heat or direct fire – risk of damage or explosion.
4. Do not throw or drop the product.
5. Only replace battery with the same type.
6. Keep away from sunlight, fire, or overheating environments.

MUSIC BASE